

FF-CLEP Series

Bulkhead & Ferrule Cleaner (Short)

The Fiber Optic Cleaner is designed to specially work well with the female bulkhead adapters and male connectors. It cleans the ferrule end faces removing dust, oil, and other debris without nicking or scratching the end face.

Applications

Connector inside adapter

1. Remove guide cap from the device
2. Insert tip of cleaner into adapter
3. Push the outer shell to start cleaning the connector end face. A click sound indicates end of cleaning process.
4. Close cover after use.

Connector plugs alone

1. Open the cover on the guide cap
2. Insert connector into the guide cap
3. Push the outer shell to start cleaning the connector end face. A click sound indicates end of cleaning process.
4. Close cover after use.


Note:

1. Be careful not to slant the cleaner while inserting into the guide cap.
2. Do not overly exert force during insertion as this may cause damage to both connectors and the cleaner.
3. If pushing outer shell is inhibited, remove cleaner from adapter and ensure that there is no sizable debris inhibiting the cleaning process.



Features

- Working for 1.25/2.5mm connector
- Easy to operate
- Compatible with connectors and bulkhead
- Very short 110x30x18mm
- Over 800 times for standard usages

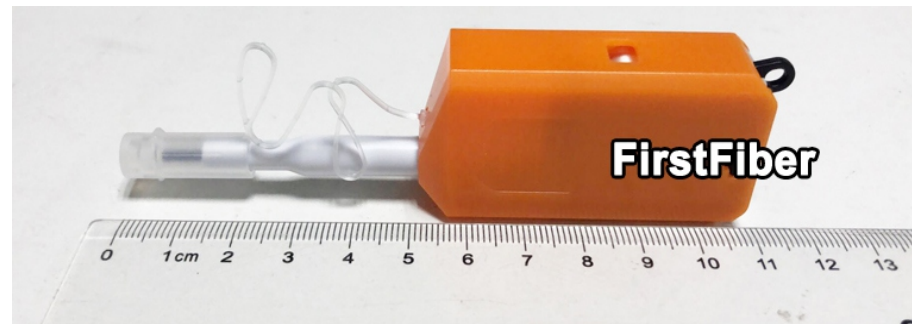

ORDERING INFORMATION

- FF-CLEP-25-M ϕ 2.5mm Cleaner
 FF-CLEP-125-M ϕ 1.25mm Cleaner